 


Operating Instructions For The AMINO-4 4-Function Remote Control

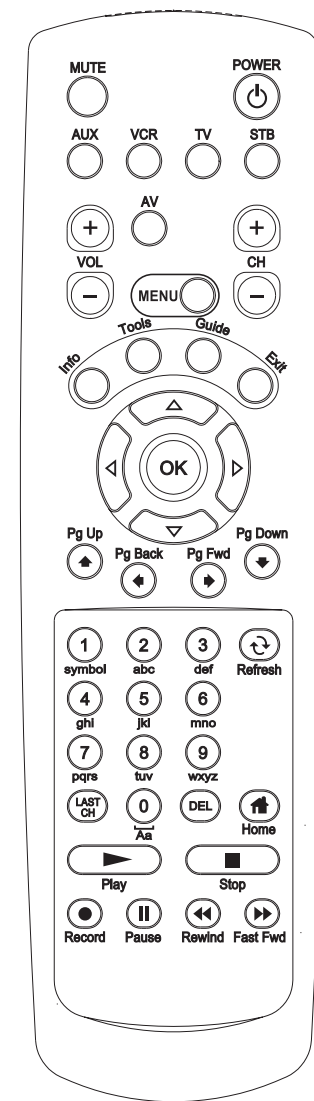

Universal Remote Control, Inc.
www.universalremote.com
OCE-0040A Rev01(10/25/05)

1 Introduction

The AMINO-4 remote control is designed to operate the Amino range of Set-Top Boxes (STBs) and the majority of TVs, VCRs, DVDs and AUDIO components on the market today, as shown below.

TV : TVs, Plasma TVs and LCD TVs

VCR : VCRs and DVDs

AUX : Audio Receivers and Amplifiers, etc

 
2 Replacing Batteries

Before you program or operate the remote control, you must install two new AAA alkaline batteries.

STEP1 Remove the battery compartment cover on the back of your remote control.

STEP2 Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP3 Replace the battery compartment cover.

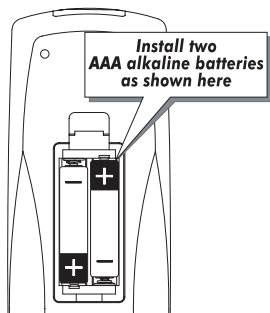


4 Operations

Device Default: AMINO Set-Top Box.

Volume Default: TV volume and mute through the TV, with the option of controlling volume and mute through the STB or AUDIO component. Refer to section E for programming the volume and mute through your STB or AUDIO component.

Channel Default: STB channel and number keys through the STB, with the option of controlling channel and number keys through the TV or VCR. Refer to section F for programming the channel and number keys through your TV or VCR.

 3 Button Functions

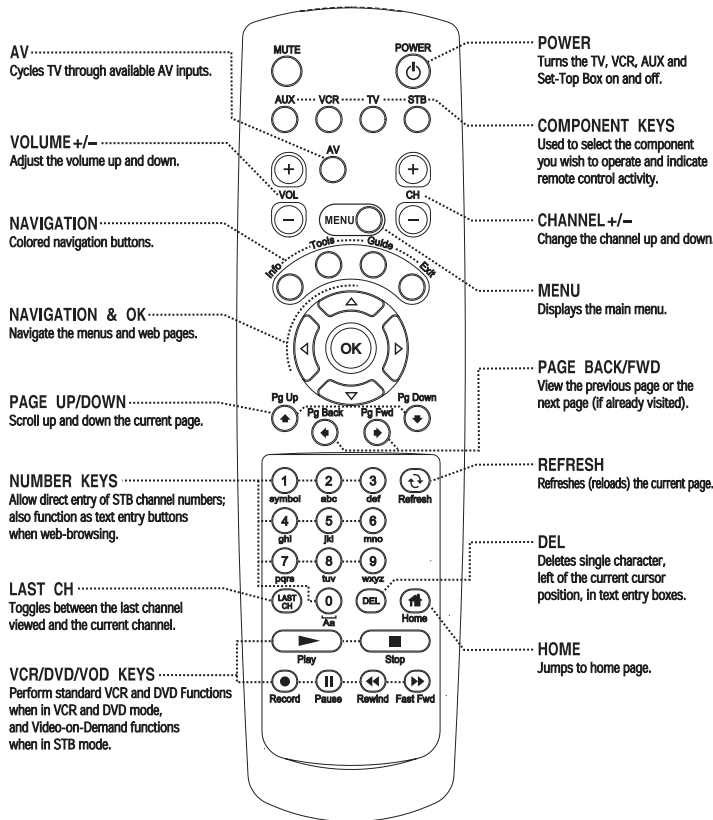

5 Programming the Remote Control

A. Three-Digit Code Programming Method.

The remote control can be programmed by pressing in a three-digit code number that corresponds to a particular manufacturer and brand of Audio/Video component. The three-digit code numbers are listed in the Set-up Code Tables on the backside of this instruction manual.

STEP1 Turn on the A/V component you wish to program. (TV, VCR, DVD or AUX).

STEP2 Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and the [OK] button simultaneously for 3 seconds. The selected component LED light will turn on indicating the component is ready to be programmed.

***Tip**: If you do not begin entering code numbers within 20 seconds, the component LED light will turn off and exit set-up mode and you will need to start over.

STEP3 Point the remote control toward the selected component and enter the three-digit code number assigned to your brand from the code tables.

***Tip**: The component will turn off when the correct three-digit code number has been entered. You can verify you have selected the correct code by pressing the [POWER] button. The component should turn on or off.

***Note**: 2 colons If there is more than one three-digit number listed for your brand, try one code number at a time until your component turns off.

STEP4 Store the three-digit code number by pressing the same [COMPONENT] button once again. The component LED will blink twice to confirm that the code has been stored.

***Note**: Try all the functions on the remote control. If any of the functions do not work as they should, repeat from Step 2 using the next three-digit code number from the same brand list.

B. Auto Search Method.

If the three-digit code numbers assigned to your brand do not turn off your component or the code tables do not list your brand, you can use the **Auto Search Method to find the correct three-digit code number for your component by performing the following steps**:

STEP1 Turn on the component you wish to operate.

STEP2 Press the [COMPONENT] button (TV, VCR, DVD or AUX) to be programmed and the [OK] button simultaneously for 3 seconds. The component LED will turn on.

***Tip**: If you do not press either the CH+ or CH- button within 20 seconds, the component button LED light will turn off and exit set-up mode and you will need to start over.

STEP3 Press the [CH+] or [CH-] button one step at a time or keep it pressed. The remote will emit a series of Power ON/OFF commands. Release the [CH+] or [CH-] button as soon as the component turns off.

***Tip**: You can verify that you selected the correct code by pressing the [POWER] button again. The component should either turn on or off.

STEP4 Press the same [COMPONENT] button to store the code. The component LED light will blink twice to confirm that the code has been stored.

C. To Find the Three-Digit Code Number That was Stored in the component.

STEP1 Press the [COMPONENT] button (TV, VCR, DVD or AUX) you wish to verify and the [OK] button simultaneously for 3 seconds.

***Tip**: If you do not press the [INFO] button within 20 seconds, the component LED light will turn off and exit set-up mode and you will need to start over.

STEP2 Press the [INFO] button. The component LED light will indicate the three digits that comprise the code number by blinking the corresponding number of times for each digit, separated by a one second interval, during which time the component LED light will turn off.

Example: One blink, three blinks and eight blinks, separated by a one second interval during which time the component LED light turns off, indicates a code number of 138.

***Note**: Ten blinks is equal to the number 0.

D. Programming AUX to operate a fourth component (i.e., a second TV, VCR, or DVD or AUDIO)

STEP1 Turn on the component you wish to operate.

STEP2 Press the [AUX] button and the [OK] button simultaneously for 3 seconds. The [AUX] LED light will turn on.

***Tip**: If you do not press the desired component button within 20 seconds, the [AUX] LED light will turn off and exit set-up mode and you will need to start over.

STEP3 Press the [COMPONENT] button you wish to operate.

STEP4 Point the remote control toward the component you want to program and enter the three-digit code number assigned to your TV brand from the code tables.

***Note**: The [AUX] LED light will blink once for each button pressed. Once you enter the correct code number, the component will turn off. If the component does not turn off, press the next code numbers listed for your brand until the component turns off.

STEP5 Store the three-digit code number by pressing the [AUX] button once again. The component LED light will blink twice to confirm that the code has been stored.

***Note**: Now turn on the component and test the component functions on the remote control. If any function does not work properly, repeat from STEP 2 using the next code number listed for your component brand until you find a perfect match.

E. Programming Volume Control.

By following the steps below, the user can program the volume controls (Volume Up, Volume Down and Mute) from one device to operate in another device mode. The default volume control settings on the remote control is as follows:

STB : TV	TV : TV
VCR : TV	AUX : AUX

If you wish to store the STB volume control in STB mode, use the following steps.

STEP1 Press the [STB] button and the [OK] button simultaneously for 3 seconds until the component LED light turns on.

***Tip**: If you do not press the [VOL+] button within 20 seconds, the component LED light will turn off and exit set-up mode and you will need to start over.

STEP2 Press the [VOL +] button.

STEP3 Press the [STB] button.

The STB LED light LED will blink twice to confirm the programming.

To return to the original default state:

If you wish to restore the TV volume control in STB mode, repeat the above steps by pressing [TV] in **STEP3**.

F. Programming Channel Control.

By following the steps below, the user can program the channel controls (Channel Up, Channel Down and Last) from one component to operate in another component mode. The default channel control settings on the remote control is as follows:

STB : STB	TV : STB
VCR : VCR	AUX : AUX

If you wish to store the TV channel control in TV mode, use the following steps.

STEP1 Press the [TV] button and the [OK] button simultaneously for 3 seconds until the TV LED light turns on.

***Tip**: If you do not press the [VOL-] button within 20 seconds, the TV LED light will turn off and exit set-up mode and you will need to start over.

STEP2 Press the [VOL -] button.

STEP3 Press the [TV] button.

The TV LED light will blink twice to confirm the programming.

To return to the original default state:

If you wish to restore the STB channel control in TV mode, repeat the above steps by pressing [STB] in **STEP3**.

G. Low Battery Warning.

When the battery is low and needs to be replaced with fresh batteries, the remote control component LED lights will blink 2 times in sequence whenever a [POWER] button is pressed to turn on components

H. Memory Lock System.

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

I. Write your component Set-up codes.

TV Set-up Code Number:
VCR Set-up Code Number:
AUX Set-up Code Number:

6

Set-up Code Tables

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	072 081 160 161 096
ADVENT	247
AIKO	103
AKAI	006 146 248
ALARON	028
AMARK	112 143
AMERICA ACTION	043
AMPRO	073
ANAM	043 054 055 056 080 112
AOC	058 006 004 112
APEX DIGITAL	015 226 037
AUDIOVOX	076 103 043 035
BAYSONIC	043
BELL&HOWELL	072
BRADFORD	043
BROKSONIC	096
CANDLE	006 002 003 004
CAPEHART	058
CARVER	164
CELEBRITY	148
CETRONIC	043
CINERAL	103 120
CITIZEN	006 002 003 004 101 103 143
CLASSIC	043
CONCERTO	004
CONTEC	043 051
CORONADO	143
CRAIG	043 054 028
CROSLEY	164
CROWN	043 143
CURTIS MATHES	006 004 101 143 011 072 081 120 164
CXC	043
DAEWOO	076 103 055 004 127 143 016 043 044 125 120
DAYTRON	004 143
DELL	041
DENON	011
DUMONT	004 073
DWIN	161
DYNASTY	043
DYNATECH	062
ELECTROBAND	001
ELECTROHOME	024 076 143
EMERSON	005 028 043 048 076 096 155 004 051 143 151 153 154
ESA	078
FISHER	007 057
FUJITSU	164 028 198 246 066
FUNAI	028 043 052 249
FUTURETECH	043
GATEWAY	242 078
GE	006 073 144 160 161 004 008 009 034 056 074 091 155 081 120

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
GIBRALTER	004 073
GOLDSTAR	004 106 119 110 112 113 127 143
GRUNPY	028 043
HALL MARK	004
HARLEY DAVIDSON	028
HARMAN KARDON	164
HARVARD	043
HITACHI	163 004 007 009 011 072 010 012 023 075 143 158
HP	027 039
HYUNDAI	049 067
INFINITY	164
INSIGNIA	024
INKEL	129
INTEQ	073
JBL	164
JCB	001
JCPENNEY	004 006 008 024 030 065 101 143 156 160
JENSEN	013
JVC	038 001 034 083 206
KENWOOD	006 001
KLOSS	002 059
KTV	006 043 143 154
LG	004 106 119 110 112 113 127 143 084
LODGENET	072
LOEWE	207 164
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164
MAGNAVOX	006 003 004 022 059 060 061 063 064 127 164 094 160 028 035
MAJESTIC	072
MARANTZ	164 006
MATSUI	164
MATSUSHITA	080
MEGATRON	004
mitsubishi	109 024 042 004 040 146 028 081 225
MOTOROLA	081
MTc	006 004 062 101
MULTITECH	043
NAD	015 025
OPTIMUS	080
OPTOMA	029 032
PHILCO	006 003 004 024 056 059 060 063 064 127 143 164
PHILIPS	164 005 038 093 127 006 003 004 059 210
PIONEER	023 025 135 176 004 018 006 209 234
POLAROID	015 077 078 079
PORTLAND	004 143 103
PRISM	034
PROSCAN	144 160 161
PROTON	004 058 143 171 173 112
QUASAR	034 056
YUPIITERU	004 019 127 143 043
RCA	160 161 144 156 065 006 004 023 024 056 074 152 081

TV	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
REALISTIC	007 019
RUNCO	072 073 050
SAMPO	006 004 058 242
SAMSUNG	004 101 127 133 143 160 089 105 211 228 229
SANSEI	120
SANSUI	096
SANYO	007 053 057 082 020
SCEPTRE	036
SCOTCH	004
SCOTT	004 005 028 043 048 143
SEARS	004 007 015 028 030 057 082 094 143 160 052 164
SEMIVOX	043
SEMP	015
SHARP	081 014 019 028 004 022 143 175
SIGNATURE	072
SONY	001 126 139
SOUNDESIGN	003 004 028 043
SPECTRICON	112
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUPRE MACY	002
SUPREME	001
SYA	079
SYLVANIA	006 003 059 060 063 064 127 160 164 044 249
SYMPHONIC	052 249
SYNTAX OLEVIA	084
TANDY	081
TATUNG	056 062
TECHNICS	034 080
TECHNOL ACE	028
TECHWOOD	004
TEKNIKA	002 003 004 024 028 043 072 101 143 103 164
TELERENT	072
TERA	172
TMK	004
TNCI	073
TOSHIBA	015 030 007 040 062 101 045
TOTEVISION	143
UNIVERSAL	008 009
VIDEO CONCEPTS	146
VIDIKRON	174 188 164 050
VIDTECH	004
WARDS	004 064 164 008 009 019 028 060 061 063 072 074 143
WESTING HOUSE	076 036
YAMAHA	004 006
YORK	004
YUPITERU	043
ZENITH	072 073 095 103 011 096
ZONDA	112

VCR & TV/VCR	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADMIRAL	025 053
AIKO	117
AIWA	034 161 101
AKAI	043 046 124 146
AMERICA ACTION	117
AMERICAN HIGH	031
AMPRO	072
ANAM	031 103
ASHA	040
AUDIO DYNAMICS	012 023 043
AUDIOVOX	101
BEAUMARK	040
BROKSONIC	035 037 129 025
CALIX	101
CANON	028 031
CAPEHART	108
CCE	024 117
CINERAL	117
CITIZEN	101 117
COLT	148
CRAIG	003 040 135 024 101
CUIRTIS MATHES	031 041
CYBERNEX	040
DAEWOO	005 108 111 117 017 065 007 010
DAYTRON	108
DBX	012 023 043
DYNATECH	034 053
ELECTROHOME	059 101
ELECTROPHONIC	101
EMERSON	006 029 035 037 129 153 017 025 027 031 034 036 046 101 131 138 117
FISHER	003 010 008 009
FUJI	031
FUNAI	034
GARRARD	034
GE	031 072 144 147 063 107 109 040 053
GO VIDEO	132 155 040 136
GOLDSTAR	101 004 012 020
HARLEY DAVIDSON	034
HARMAN KARDON	012 045
HARWOOD	024
HITACHI	004 026 034 043 063 137 150
HQ	034
HUGHES	004
INSTANTREPLAY	031
JCL	031
JCPENNEY	004 012 031 040 101
JENSEN	043
JVC	048 043 055 060 130 150 152 012 031
KEC	101 117
KENWOOD	034 150 014 048
KLH	024
KODAK	031 101
LG	101 004 012 020
LLOYD	034
LOGIK	024

VCR & TV/VCR	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
LXI	003 009 017 034 101 004 106
MAGIN	040
MAGNASONIC	117
MAGNAVOX	067 031 034 068 041 156 170
MARANTZ	067 069 012 031
MARTA	101
MATSUI	027 030
MATSUSHITA	031
MEI	031
MEMOREX	040 101 003 014 031 034 053 072 134 139 025
MGA	045 046 059
MGN TECHNOLOGY	040
MINOLTA	004 020
mitsubishi	059 061 051 004 046 020 045 053
MOTOROLA	031 053
MTc	034 040
MULTITECH	024 034
NEC	012 023 043 048
NIKKO	101
NOBLEX	040
NORDMENDE	043
OLYMPUS	031
OPTIMUS	053 101
PILOT	101
PIONEER	021 004 048
PORTLAND	108
PROFITRONIC	040
PROTEC	024
RCA	107 109 144 041 031 004 020 034 040 140 147 158 053
SALORA	014
SAMSUNG	040 017 107 109 113 115 124 122
SANKY	053
SANSUI	043 135 048 025 034
SANYO	003 014 040 134
SCOTT	017 037 129 131
SEARS	003 004 008 014 017 081 101 010 031 034
SHARP	053 031 054 159
SHINTOM	024
SHOGUN	040
SINGER	024
SONY	001 057 058 003 052 053 031 154 171 009 034
SOUNDESIGN	034
STS	004
SYLVANIA	031 034 059 067
SYMPHONIC	034
TANDY	034 010
TATUNG	043
TEAC	034 043
TECHNICS	031 070
TEKNIKA	031 034 101
THOMAS	034
TMK	006 040
TOSHIBA	017 131 004 008 059 082 150

VCR & TV/VCR	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
TOTEVISION	040 101
UNITECH	040
VECTOR RESEARCH	012
VIDEO CONCEPTS	012 034 046
VIDEOSONIC	040
WARDS	003 004 017 024 031 034 040 053 054 131
WESTINGHOUSE	024 025
XR-1000	024 031 034
YAMAHA	012 034 043
ZENITH	072 034 001 058 080 101 153 048 025

****Note :** For TV/VCR or TV/DVD combination unit, Please use following steps to operate the volume control.*

(STEP1) Press the [STB] button and the [OK] button simultaneously for 3 seconds. The [STB] button will light on for 20 seconds.

(STEP2) Press the [VOL+] button.

(STEP3) Press the [VCR] button. The LED will blink twice to confirm the programming.

DVD & TV/DVD (VCR)	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
AIWA	202
ALPINE	221
APEX DIGITAL	251 246 182 183
ARCAM	215
CARY AUDIO DESIGN	184
CLASSE	193
CYBERHOME	220
DAEWOO	220
DENON	226 241
FUNAI	208
GE	230 231
GOLDSTAR	235 239
GO VIDEO	201 187 188 189 194
HARMAN KARDON	243
HITACHI	223
HITEKER	246
JVC	238
KENWOODD	216
KLH	210
LG	148
MAGNAVOX	254 237
MARANTZ	253 242
MCINTOSH	217
MEMOREX	207
mitsubishi	227

DVD & TV/DVD (VCR)	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
MYRYAD	224
NAD	247 239
NAKAMICHI	225
ONKYO	240
OPTIMUS	229
PANASONIC	228 206 226
PHILIPS	253 237 214 242
PIONEER	255 222 229
POLAROID	195
PRIMARE	185 186
PROCEED	245
PROSCAN	230 231
RCA	230 231
SAMSUNG	236 248 201 191
SANSUI	205
SANYO	204
SENSORY SCIENCE	189 190
SHARP	252
SONY	232 218 203
SYLVANIA	208
SYMPHONIC	208
TATUNG	224
TECHNICS	228
THETA DIGITAL	229
TOSHIBA	233 244 219 205 192
VENTURER	209
YAMAHA	249 226 181
ZENITH	239 226 235 239

AUDIO(AUX)	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ADC	200
ADCOM	072 082 092 161
AIWA	025 071 104 114 170 171 091 100
AKAI	139 093
AMC	125 126 127 128
ANGSTROM	142
ARCAM	141
AUDIO ACCESS	147
AUDIO ALCHEMY	135
AUDIO FILE	203
AUDIO MATRIX	077
AUDIO TECHNICA	134
B & K	096 097
BOSE	070 170 113
BRYSTON	015
CARVER	003 008 028 099 151 203 014 016 040 090
CASIO	204
CHIRO	140
CINEMA SOUND	084 134
CITATION	148
CLARION	026
CURTIS MATHES	204
DENON	084 151 155 188 056 119

AUDIO(AUX)	
MAKER(BRAND) NAME	CODE NUMBER (3 DIGIT) LIST
ENLIGHTENED AUDIO	049 050
FISHER	151
FOSGATE AUDIONICS	062 148
GOLDSTAR	072 006
HARMAN KARDON	153 148 162 060 066 115
HITACHI	020
INKEL	005
INTEGRA	084 046 012 030 041 081 103 044
JCPENNEY	102 204
JENSEN	058
JVC	013 163 176
KENWOOD	005 026 057 166 095
KOSS	102
KRELL	150
KYOCERA	200
LEXICON	120 167 171 172
LG	072 006
LUXMAN	035 137 139 165 004 029
LXI	204
MAGNAVOX	152 164 191 043
MARANTZ	028 048 063 191 090
MCINTOSH	173
MCS	204
MERIDIAN	009 051
mitsubishi	180
MONDIAL	022 023 042 073 075
NAD	048
NAKAMICHI	111 182 183 079 087
NEC	080
ONKYO	084 046 012 030 041 081 103 044
OPTIMUS	017 036 138 026
PANASONIC	007 088 129 130 132 195
PARASOUND	129 130 132
PHILIPS	063 188 189 191
PIONEER	084 039 045 054 069 078 168 128 158
PROCEED	144
QUASAR	007 088 129 130 132 195
RCA	010 067 117 156
REALISTIC	019 034 037 047
ROTEL	074 083 085
SAMSUNG	123
SANSUI	063 110 032 116
SANYO	151
SCOTT	148
SEARS	204
SHARP	026 057 094 175
SHERWOOD	024 038
SONY	001 011 055 187 053 112 018
SOUNDESIGN	036
SSI	068
TEAC	019 059 111 109
TECHNICS	076 088 122 193 080 098
THETA DIGITAL	065
TOSHIBA	033 112
YAMAHA	021 026 031 067 192 002 101 118
ZENITH	143 106